




BE SURE. BE KRYTON.

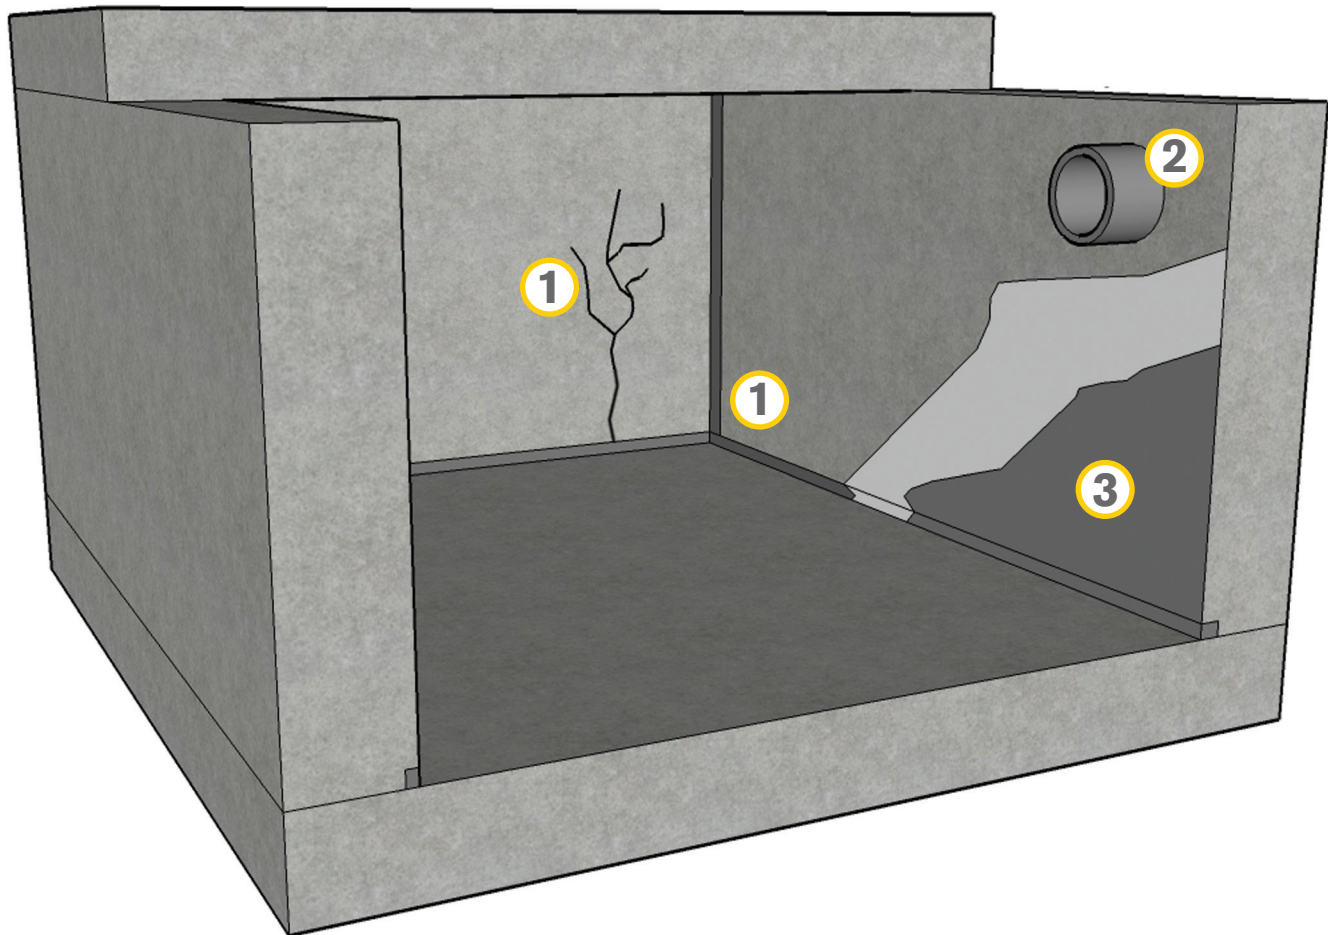

1. Use the Krystol Crack Repair System to treat leaking cracks and joints. Refer to Application Instruction 5.11 — Waterproofing Cracks, Holes and Joints.
2. Use Krystol Plug, Krystol T1 and Krystol Bari-Cote to waterproof leaking pipe penetrations. Refer to Application Instruction 5.32 — Waterproofing Pipe Penetrations (Existing Construction).
3. Apply Krystol T1 and T2 surface treatment to the slab and walls to prevent further water ingress. Refer to Application Instruction 2.11 — Waterproofing with Surface-Application (Brush Method) or Application Instruction 2.12 — Waterproofing with Surface-Application (Spray Method).